


# Quick Guide to Elnur's ECOHHR PLUS

Follow these steps to change the temperature of your ECOHHR PLUS

These steps will temporarily change the temperature.

1. Your heater's home screen should, by default, look like this.

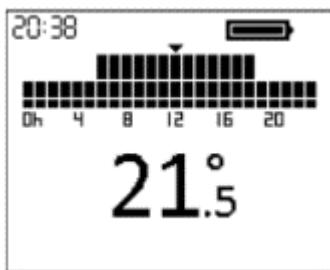

---

2. You can change the temperature by pressing the  or  buttons. The temporary change is retained until the next change of programmed period.


---

# Quick Guide to Elnur's ECOHHR PLUS

Follow these steps to change the temperature of your ECOHHR PLUS

These steps will permanently change the temperature.

1. Your heater's home screen should, by default, look like this.

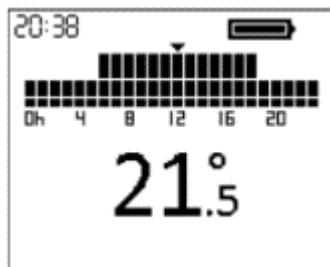


---

2. Hold down the  button until the display shows the settings menu.




---

3. Use the  or  button to move up or down until you get to the Programme Settings.

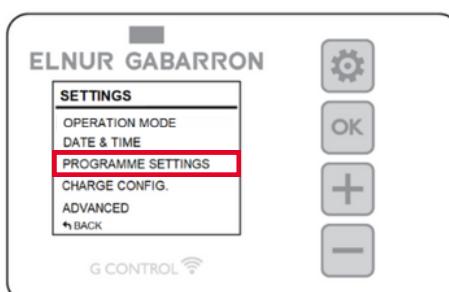


# Quick Guide to Elnur's ECOHHR PLUS

4. Press and release the  button and the display will show the below.



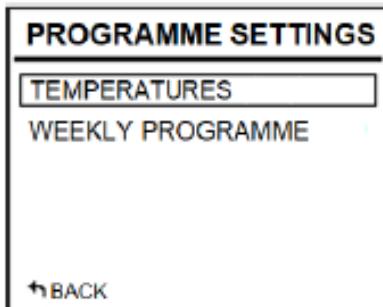


5. Press and release the  button again and the display will show the below.

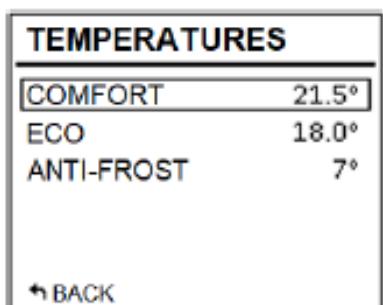

Use the  or  button to move up or down until you get to the temperature mode that you want to adjust.

6. Press and release the  button again and the display will show one of the below.

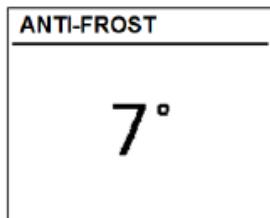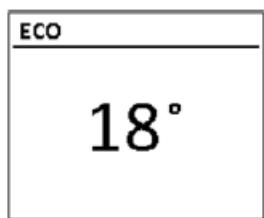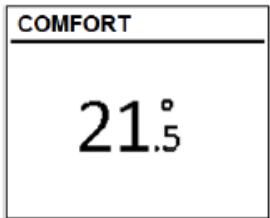


Use the  or  button to adjust temperature. Press the  button until you return to the home screen.


# Product Features



Wi-Fi Compatible

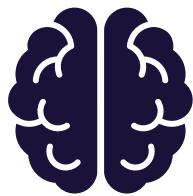

Intelligent Design

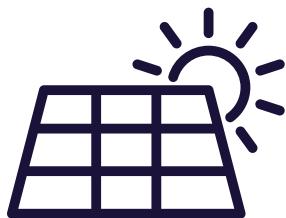

Utilise Renewable Energy



Energy Efficient



Daily and Weekly Scheduling



Control By Voice

